

**Annotaton:**

The present operation bulletin contains modified data on operation of tractors BELARUS-923 completed with a distributor ПИ70 with one valve fixed in “Uplift” position.

**Content of changes:**

1 Unit “E. Controls and instruments”, subsection “Hydraulic system distributor control” shall be supplemented with the following text:

Against order the tractors may be equipped with a distributor ПИ70 with fixation of a valve, controlling right side outlet, in “Uplift” position without automatic return to “Neutral” position.

**ATTENTION:** WHEN OPERATING WITH THE USE OF THE MENTIONED VALVE IN THE POSITION “UPLIFT” DON'T FORGET TO SET THE VALVE CONTROL LEVER INTO “NEUTRAL” POSITION AFTER COMPLETION OF THE OPERATION IN ORDER TO PROTECT THE HYDRAULIC SYSTEM FROM OVERHEATING AND PREMATURE FAILURE OF THE PUMP AND OTHER UNITS OF THE HYDRAULIC SYSTEM!