

Бюллетень
Bulletin
6 -2011 БЭ

Количество листов
Quantity of sheets
Лист
Sheet

2

?

Annotation:

The present information bulletin contains modified data on operation tractors BELARUS-550/552/570/572/590/592/590.2/592.2 completed with a distributor RP70 with fixation of one valve in the position “Uplift”.

Content of changes:

- 1 Unit “B. Technical data”, subsection “Hydraulic system” shall be amended as follows
 - the information available: “Valve distributor P80-3/1-222-3Гг (P80-3/1-111-3Гг against order)-for tractors without a draft control unit); P80-3/4-222- 3Гг (P80-3/4-111-3Гг against order); for tractors with a draft control unit”.
 - shall be replaced with: “Distributor: valve distributor P80-3/1-222, P80-3/1-111, РП70-890 – for tractors without a draft control unit; P80-3/4-222, P80-3/4-111, РП70-1221C for tractors with a draft control unit”.

- 2 Unit ”C. Controls and instruments”, subsection “Control of hydraulic system distributor” shall amended as follows:

- the information available: “Each of the levers has four positions: “Floating”, “Forced downward motion”, “Neutral” and “Uplift”. In a position “Forced downward motion” with the engine operating the lever shall be held with a hand”.

- shall be replaced with: “Each lever has four positions: “Floating”, “Forced downward motion”, “Neutral” and “Uplift”. “Floating” and “Neutral” positions are fixed; “Forced downward motion” is nonfixed. When released the levers return to “Neutral” position. “Uplift” is a nonfixed position for distributors P80-3/1-111, P80-3/4-111, РП70-890 and РП70-1221C. When released the levers return to “Neutral” position. For distributors P80-3/1-222 and P80-3/4 - 222 the position is fixed. The levers automatically return to “Neutral” position with pressure from 16 to 20 MPa.

Shall be supplemented with the following text:

Against order the tractors may be equipped with a distributor РП70 with fixation of a valve, controlling right side outlet, in “Uplift” position without automatic return to “Neutral” position.

ATTENTION: WHEN OPERATING WITH THE USE OF THE MENTIONED VALVE IN THE POSITION “UPLIFT” DON’T FORGET TO SET THE VALVE CONTROL LEVER INTO THE POSITION “NEUTRAL” AFTER COMPLETION OF THE OPERATION IN ORDER TO PROTECT THE HYDRAULIC SYSTEM FROM OVERHEATING AND PREMATURE FAILURE OF THE PUMP AND OTHER UNITS OF THE HYDRAULIC SYSTEM.