

### **Annotation:**

The present information bulletin contains modified data on operation of tractors BELARUS-900/900.2/900.3/920/920.2/920.3/920.4/950/950.2/950.3/952/952.2/952.3/952.4 completed with a distributor РП70 with one valve fixed in “Uplift” position.

### **Content of changes:**

1 Unit “Controls and instruments”, subsection “Control of hydraulic system distributor (remote hydraulic cylinder)” shall be supplemented with the following text:

Against order the tractors may be equipped with a distributor РП70 with fixation of a valve, controlling right side outlet, in “Uplift” position without automatic return to “Neutral” position.

**ATTENTION: WHEN OPERATING WITH THE USE OF THE MENTIONED VALVE IN THE POSITION “UPLIFT” DON’T FORGET TO SET THE VALVE CONTROL LEVER INTO “NEUTRAL” POSITION AFTER COMPLETION OF THE OPERATION IN ORDER TO PROTECT THE HYDRAULIC SYSTEM FROM OVERHEATING AND PREMATURE FAILURE OF THE PUMP AND OTHER UNITS OF THE HYDRAULIC SYSTEM!**