



Annotation:

The present operation bulletin contains modified data on operation of tractors BELARUS-1220.1 /1220.3/1220.4 completed with a distributor ПП70 with one valve fixed in “Uplift” position.

Content of changes:

1 Unit “D. Controls and instruments”, subsection “Control of hydraulic lift linkage with hydraulic hoist”, “Control of hydraulic lift linkage distributor” shall be supplemented with the following text:

Against order the tractors may be equipped with a distributor ПП70 with fixation of a valve, controlling right side outlet, in “Uplift” position without automatic return to “Neutral” position.

ATTENTION: WHEN OPERATING WITH THE USE OF THE MENTIONED VALVE IN THE POSITION “UPLIFT” DON'T FORGET TO SET THE VALVE CONTROL LEVER INTO “NEUTRAL” POSITION AFTER COMPLETION OF THE OPERATION IN ORDER TO PROTECT THE HYDRAULIC SYSTEM FROM OVERHEATING AND PREMATURE FAILURE OF THE PUMP AND OTHER UNITS OF THE HYDRAULIC SYSTEM!