



Annotation:

This operation bulletin contains amended data on running of tractors BELARUS-925.4 completed with a valve group PII70 with fixation of one valve in “Uplift” position.

Content of changes:

Section “3. Controls and instruments”, subsection 3.11 “Control of hydraulic system valve group”, clause 3.11.1 “General information”

The information available: “Lowering” and “Uplift” – nonfixed.

Shall be replaced with: “Lowering” – nonfixed

“Uplift” – nonfixed for outlets 1 and 3. For outlet 2 (right lateral) – fixed position without an automatic return into “Neutral” position.

ATTENTION! DURING OPERATION USING THE OUTLET 2 CONTROL VALVE IN POSITION “UPLIFT”, DO NOT FORGET TO SET THE VALVE CONTROL LEVER INTO “NEUTRAL” POSITION AFTER COMPLETION OF THE OPERATION IN ORDER TO AVOID OVERHEATING OF THE HYDRAULIC SYSTEM AND PREMATURE WEAROUT OF THE PUMP AND OTHER COMPONENTS OF THE HYDRAULIC SYSTEM.

Against order the tractors can be equipped with the valve group PII70 without valves fixation in the “Uplift” position.