



Annotation:

This operation bulletin contains supplementary information on fire safety requirements and information about inadmissibility of tractor operation without accumulator batteries in electrical system of the tractor.

Content of changes:

Subsection “Fire safety measures” of the section “Safety measures” shall be re-drafted as follows:

Fire safety measures

The tractor must be equipped with fire fighting equipment, i.e. a shovel and a fire extinguisher.

OPERATING THE TRACTOR WITHOUT FIRE FIGHTING EQUIPMENT IS FORBIDDEN.

The tractor must be filled with fuel and lubricants by a mechanic way and with the engine stopped. Use lighting at night time. It is not recommended to fill in tanks using buckets.

IT IS FORBIDDEN TO FUEL IN THE TRACTOR WITH THE ENGINE RUNNING.

DO NOT SMOKE WHEN FUELING IN THE TRACTOR.

Do not fuel the tanks to the max. Leave at least 3% of tank volume empty for fuel to expand.

Do not add petrol or mixtures to diesel fuel. This combination may create increased danger of inflammation or explosion.

Places for tractor parking, storing of fuel and lubricants shall have a plowed around band of not less than 3 m width and also be provided with fire extinguishing means.

During repair works in the field using electric gas welding proceed as follows:

- turn the storage battery switch off;
- remove plant debris from parts and assembly units;
- detach wires from the battery terminals. Insulate the wire tips to avoid accidental contact with the battery terminals;
- on tractors with electronic control disconnect the wire bundle connector from the engine electronic control unit;
- if you want to carry out welding work on the tractor close to any electronic component this component must be removed for the time of welding;
- earth the welding machine as close to the place of welding as possible;
- after completion of welding observe polarity when connecting the wires to the terminals of the battery.



Prevent the manifold and muffler from getting dirty with fuel, thatch, etc.

Avoid thatch winding around rotating parts of the tractor and the implements coupled with the tractor.

Washing parts and assembly units with kerosene, gasoline or diesel fuel take care to exclude a possibility of inflammation of flushing fluid vapor.

IT IS FORBIDDEN TO OPERATE THE TRACTOR IN PLACES SUBJECTED TO FIRE RISK WITH THE FACING AND PROTECTIVE UNITS REMOVED.

Do not use open fire to warm up oil in the engine sump, to fill in fuel tanks, to burn out dirt in a radiator cell and in other units of the tractors.

In case fumigation or a fire bed occurs, stop the tractor immediately, kill the engine and turn the battery switch off. To liquidate the fire bed use a dry-powder fire extinguisher or pour some sand onto it, cover with canvas cloth, sackcloth or other dense texture. Do not pour water over burning fuel and oil.

Make sure there are no flammable materials near the exhaust manifold and the muffler during engine running.

Harvesting hay and thatch, operating at places with enhanced danger of fire, avoid amassment of inflammable materials on a muffler guard and on gas links.

During the daily maintenance you are to perform the following operations obligatory:

- inspect the condition of wiring, wire bundles in the engine compartment and in the area of the front wall of the cabin and also the condition of visible parts for abrasion, thermal reflow or destruction of outer insulation. In the case the listed defects are discovered, take measures to eliminate the identified insulation faults as well as the cause that has promoted the insulation faults;

- inspect the hydraulics components. In case there is sweat and leakage, it should be eliminated by tightening the threaded connections. Pipes and high-pressure hoses having cracks, cuts or damages must be replaced.

To avoid burning of the tractor wiring on tractors BELARUS-900/900.3/920/920.2/920.3/950/950.3/952/952.2/952.3, never use fuse cutouts for higher current rates than those specified in subsection "Cutout fuses" of the section "Controls and instruments"; on the tractors BELARUS-920.4/952.4 never use fuse cutouts for higher current rates than those specified in subsection "Cutout fuses" of the section "Controls and instruments" and electrical circuit diagram of the outer part of engine D-245.43S3A /D-245.5S3A control of the tractors „BELARUS-920.4/952.4“ (figure 2.4 of the document 920.4-0000010Б-01ОМ).

DO NOT INSTALL WIRE BRIDGES AND OTHER CURRENT CONDUCTIVE ELEMENTS MADE BY HANDICRAFT TECHNIQUE, TO REPLACE FUSE CUTOUPS.

Turn the battery switch off when finishing to operate the tractor.

Section „For operator’s attention“ shall be amended as follows:

IT IS FORBIDDEN TO OPERATE THE TRACTOR WITHOUT ACCUMULATOR BATTERIES IN THE ELECTRICAL SYSTEM.