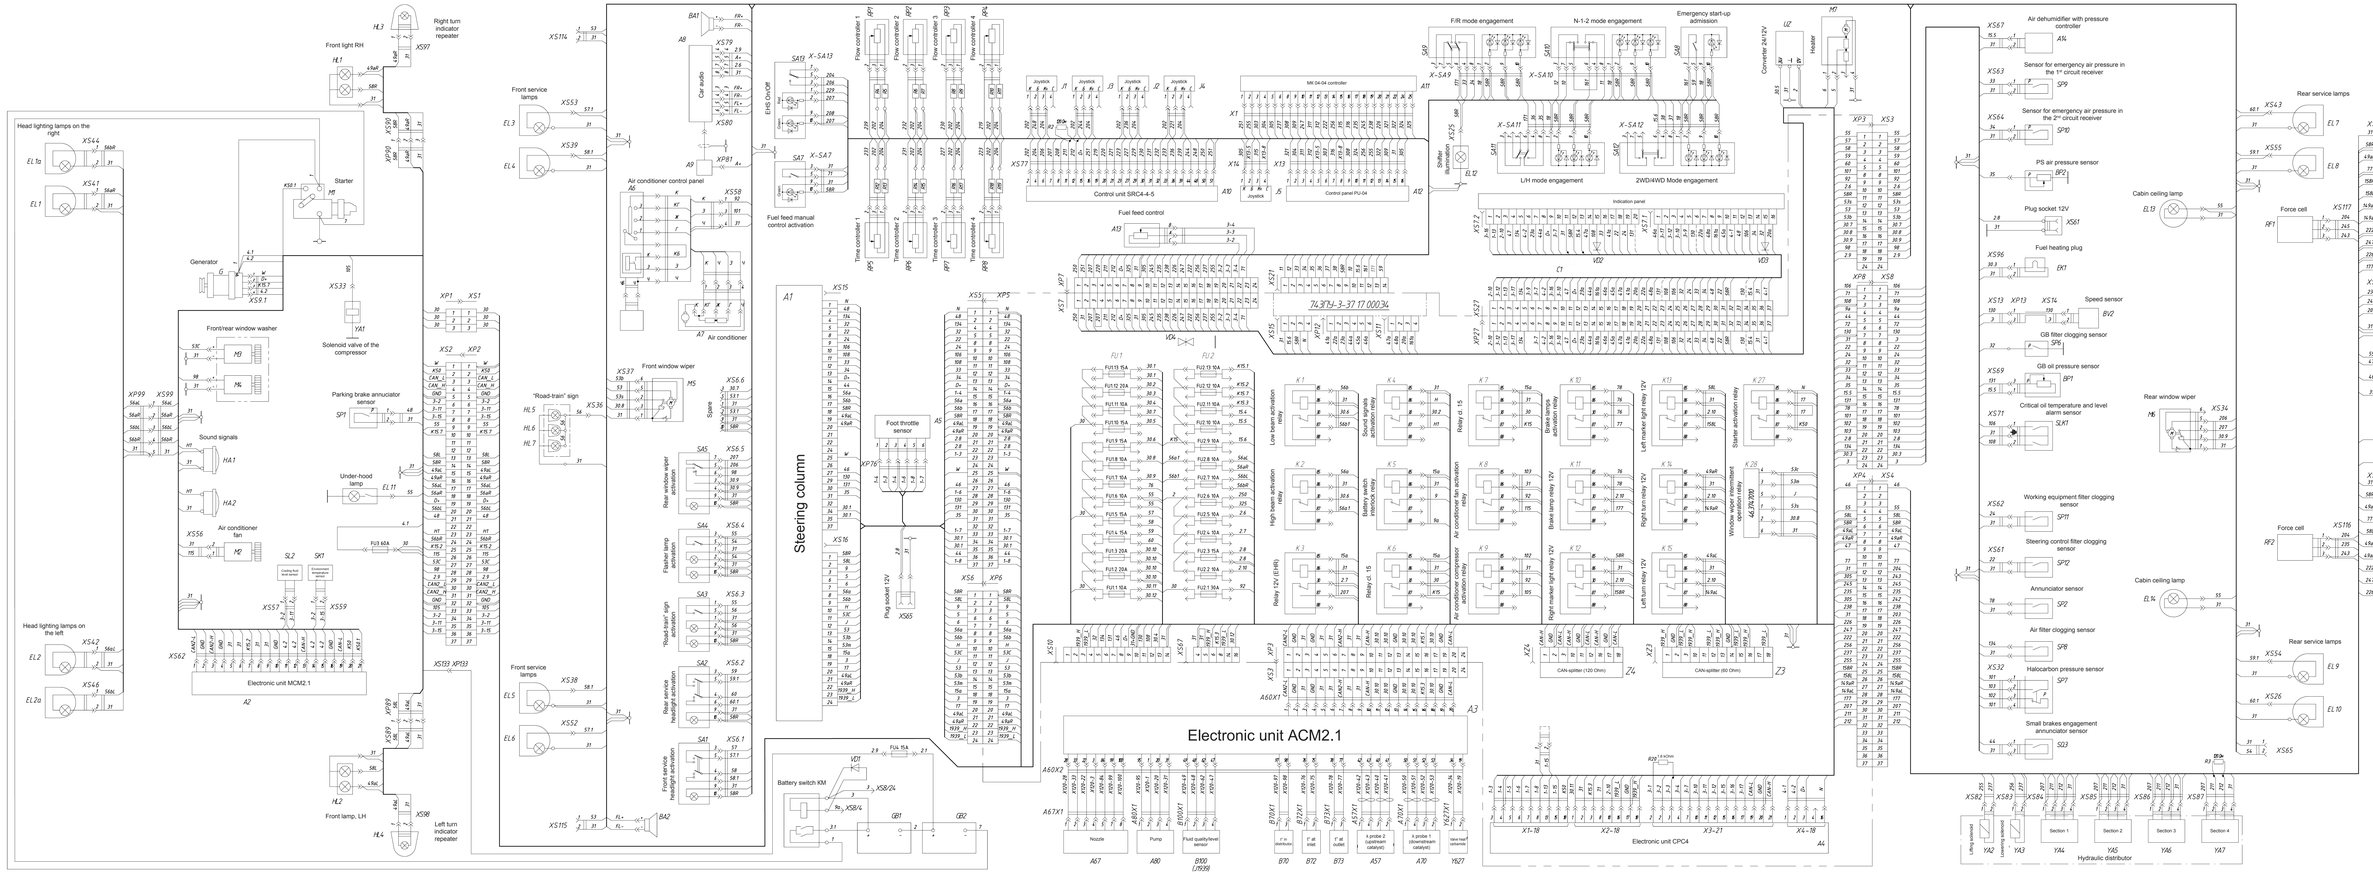
Steering column
Electronic unit ACM2.1
Electronic unit CPC4
Control unit SRC4-4-5
Control panel PU-04
Electronic unit MCM2.1
Hydraulic distributor
Wiring diagram